


Features and benefits

- Dry running and self-priming
- Suction capability up to 9.5 mWC (374 inWC)
- Simple hose change decreases cost of ownership, downtime and need for parts inventory
- “Beyond the hose” protection against common water and waste water treatment chemicals
- Paint-free pump housing perfect for wash-down in the food industry
- No slippage, allowing true positive displacement for accurate and repeatable metering
- No ancillary equipment, check valves, sealing water flush systems or run-dry protection required
- Fully reversible to blow out suction and drain lines safely

DuCoNite10 performance

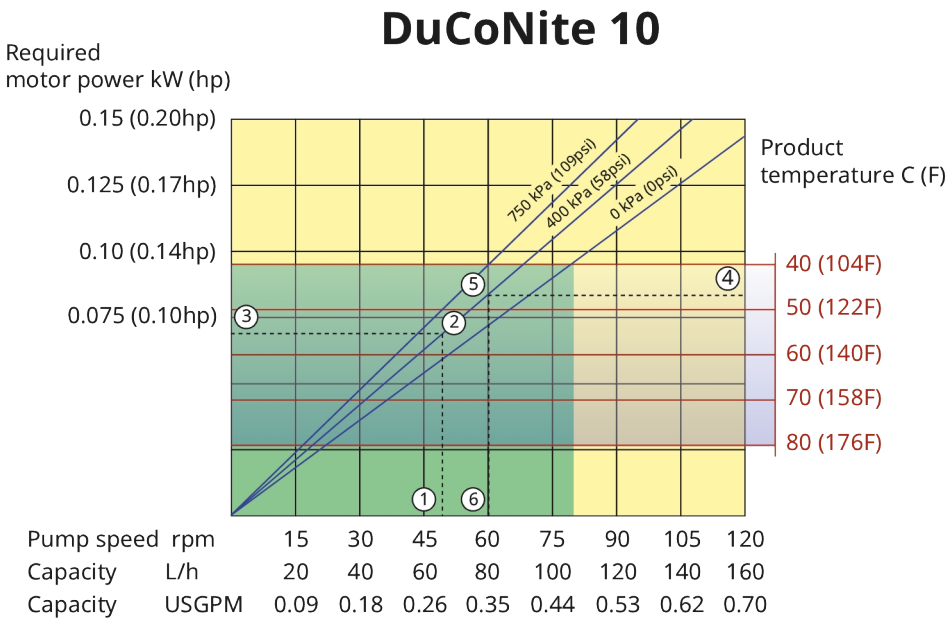

Note: The area of continuous operation diminishes with increased product temperatures. For product temperatures >40C, the area of continuous operation reduces to the corresponding red temperature line.

1. Flow required indicates pump speed
2. Calculated discharge pressure
3. Net motor power required
4. Product temperature
5. Calculated discharge pressure
6. Maximum recommended pump speed

- Continuous duty
- Intermittent duty
- * Maximum 3 hours operation followed by minimum 1 hour stop

Technical specifications

	DuCoNite10
Max. flow rate continuous	28 USGPH (105 L/h)
Max. flow rate intermittent	42 USGPH (160 L/h)
Volume per revolution	0.0058 USG (0.022 l)
Max. continuous operating speed	80 rpm
Max. intermittent operating speed	120 rpm
Max. operating pressure	174 psi (12 bar)
Suction pressure	0.05 bar abs
Suction pressure	0.73 psi abs
Max. inlet pressure	30 psi abs (2 bar abs)
Max. suction capability	374 inWC (9.5 mWC)
Operating temperature	-4 °F to 113 °F (-20 °C to 45 °C)
Fluid temperature	-4 °F to 176 °F (-20 °C to 80 °C)
Min. starting torque	416 in.lbs (47 N m)
Weight	66 lbs (30 kg)
Hose lubricant required	0.13 USG (0.5 l)
Port configurations	Down, Left, Right, Up
Compatible hose materials	CSM, EPDM, F-NBR, NBR, NBR for food, NR, NR-Metering, NR-Transfer
Flange assembly type	ANSI, DIN


Please consult your Bredel representative for lower or higher temperature operation.

Allowable ambient temperature is based on pump capabilities and may be further limited by gearbox ambient capabilities.

Materials of construction

	DuCoNite10
Hose material	CSM, EPDM, F-NBR, NBR, NBR for food, NR, NR Endurance, NR-Transfer
Housing	Cast iron with DuCoNite surface treatment
Rotor assembly	Cast iron with DuCoNite surface treatment
Cover assembly	Cast iron with DuCoNite surface treatment
Brackets and fasteners	Stainless steel 316
Support frame	Stainless steel 316
Hose clamps	Stainless steel 316
Coupling bush	Alloy steel
Seals	EPDM

DuCoNite10 dimensions

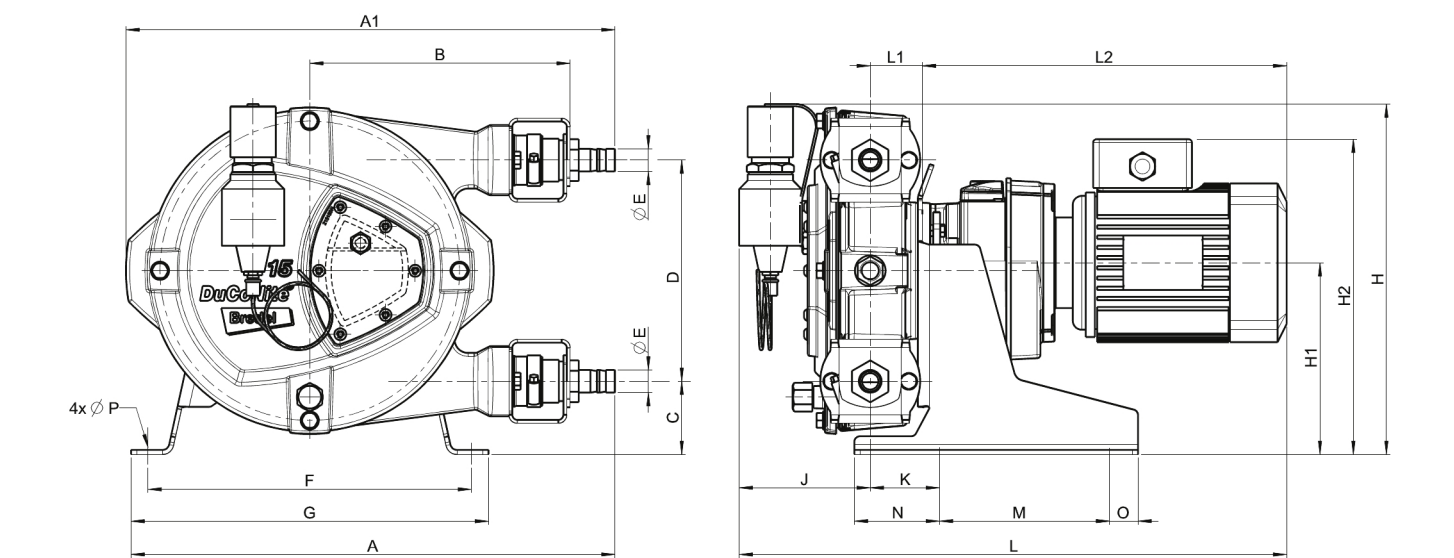

Type	A	A1	B	C	D	ØE	F	G	H	H1	H2max	J	K	Lmax	L1	L2max	M	N	O	ØP
DuCoNite 10 (mm)	337	311	171	62	116	16	235	265	225	127	254	78	51	501	46	378	150	65	25	12
DuCoNite 10 (inches)	13.3	12.2	6.7	2.44	4.6	16mm	9.3	10.4	8.9	5.0	10.0	3.1	2	19.7	1.8	14.9	5.9	2.6	1.0	12mm
Connector sizes						ANSI 150#						EN DIN						JIS		
DuCoNite 10						0.5"						10mm						10mm		

Product codes

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Bredel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Bredel are registered trademarks.



wmfts.com/global
11 July 2025