

# 701DFB with REA (ATEX) pumphead



700 series close-coupled pumps

### Features and benefits


- Flow rates up to 8.4 GPM at 30 psi peak pressure
- A choice of fixed speeds: 45 rpm, 134 rpm, 232 rpm and 348 rpm. Other speeds on request
- LoadSure tubing elements in four sizes and five materials, with industrial cam-and-groove connectors or sanitary Tri-clamp-style connectors
- Rugged, chemical and knock-resistant finish; tool-unlockable track
- Driven occlusion rollers for longer tube life



### 701DFB with REA (ATEX) pumphead performance

| Typical flow rates per pumphead (L/h) |                         |        |        |        |        |                          |        |        |  |
|---------------------------------------|-------------------------|--------|--------|--------|--------|--------------------------|--------|--------|--|
|                                       | 701RA continuous tubing |        |        |        |        | 701REA LoadSure elements |        |        |  |
| Fixed speeds                          | 9.6mm                   | 12.7mm | 15.9mm | 19.0mm | 25.4mm | 12.7mm                   | 15.9mm | 19.0mm |  |
| 112rpm                                | 130                     | 240    | 340    | 470    | 620    | 240                      | 340    | 470    |  |
| 360rpm                                | 420                     | 780    | 1100   | 1500   | 2000   | 780                      | 1100   | 1500   |  |

### Flow rates by tube bore sizes for various pressure conditions.

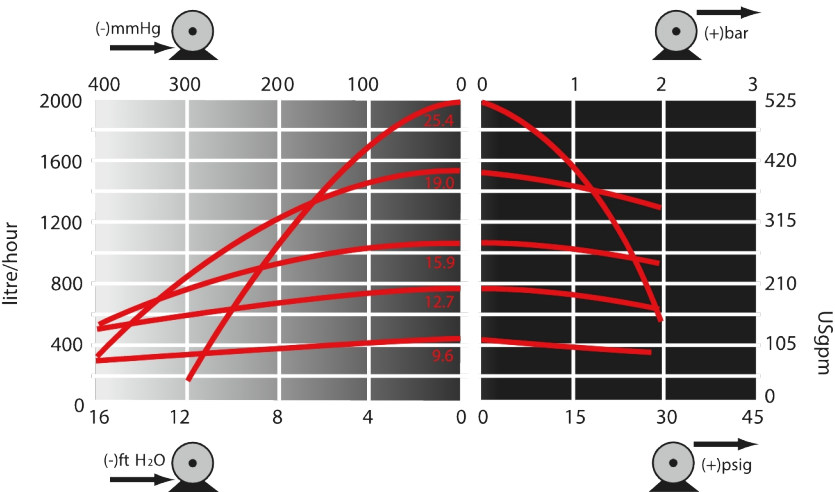

For critical applications determine flow under operating conditions. Flow can vary due to tube tolerances and system configuration

Flow rates per pumphead at 360rpm, clockwise, water 20C

### Technical specifications

|                    | 701DFB with REA (ATEX) pumphead               |
|--------------------|-----------------------------------------------|
| FlowRateRange      | 130 L/h to 2000 L/h                           |
| Motor types        | Fixed speed motor                             |
| Standards          | ATEX 2014/34/EU, CE, EX II 2G Exh IIB T4 G6 X |
| Ingress Protection | IP55                                          |
| Noise              | <85dB(A) at 1m                                |
| Weight             | 90 lbs (41 kg)                                |
| Power supply       | 230/400V 3ph, 50Hz                            |

<p>Table lists details for fixed speed pumps. For more detail on drive, AC motor and inverter options please contact your local Watson-Marlow Fluid Technology Solutions representative.</p>


Materials of construction

|                         | 701DFB with REA (ATEX) pumphead      |
|-------------------------|--------------------------------------|
| Gearbox                 | Aluminum, Cast iron                  |
| Motor                   | Cast iron                            |
| Pumphead rotor assembly | Aluminum alloy LM24, Stainless steel |
| Fixings                 | Stainless steel                      |
| Tube clamp assembly     | Glass filled Nylon                   |

Information listed covers the complete range of fixed speed pumps.

For detailed specifications of individual models/components and other drive/pumphead options, refer to user manual or contact WMFTS representative.

701DFB with REA (ATEX) pumphead dimensions

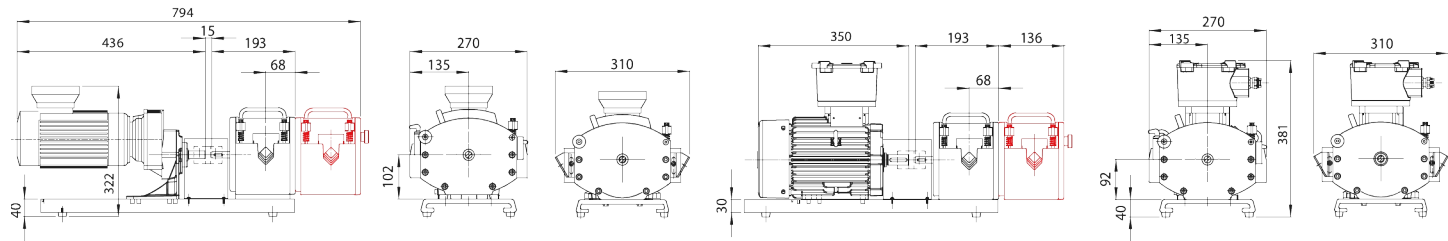

Measurements shown in millimetres (mm)

Dual pumphead versions

Product codes

| Pump                         | rpm | Supply                         | Product code |
|------------------------------|-----|--------------------------------|--------------|
| 701DFB/REA (Single pumphead) | 112 | 230/400V 50Hz 3ph 0.37kW *10:1 | 070.1012.E00 |
|                              | 360 | 230/400V 50Hz 3ph 1.1kW *10:1  | 070.1032.E00 |

\*10:1 speed reduction available using VFD. Geared units fitted with PTC thermistors

| Pumphead          | Description                                | Product code                             |                                          |              |
|-------------------|--------------------------------------------|------------------------------------------|------------------------------------------|--------------|
| 701RBEA           | Four roller LoadSure element ATEX pumphead | 073.0104.A00                             |                                          |              |
| 4.8mm wall tubing |                                            |                                          |                                          |              |
| Bore/wall (mm)    | Bioprene                                   | Marprene                                 | Pumpsil                                  | PureWeld XL  |
| 9.6/4.8           | 933.0096.048                               | 902.0096.048                             | 913.A096.048                             | 942.0096.048 |
| 12.7/4.8          | 933.0127.048                               | 902.0127.048                             | 913.A127.048                             | 942.0127.048 |
| 15.9/4.8          | 933.0159.048                               | 902.0159.048                             | 913.A159.048                             |              |
| 19.0/4.8          | 933.0190.048                               | 902.0190.048                             | 913.A190.048                             | 942.0190.048 |
| 25.4/4.8          | 933.0254.048                               | 902.0254.048                             |                                          | 942.0254.048 |
| LoadSure elements |                                            |                                          |                                          |              |
| Bore/wall (mm)    | 12.7 x 4.8mm C&G with PP 3/4" connectors   | 15.9 x 4.8mm C&G with PP 3/4" connectors | 19.0 x 4.8mm C&G with PP 3/4" connectors |              |
| Marprene          | 902.0127.PPC                               | 902.0159.PPC                             | 902.0190.PPC                             |              |

Disclaimer: All flow rates shown were obtained pumping water at 20 °C (68 °F) with zero suction and delivery heads. Watson-Marlow, Pumpsil, PureWeld XL, Bioprene and Marprene are trademarks of Watson-Marlow Limited. Disclaimer: The information contained in this document is believed to be correct but Watson-Marlow Limited accepts no liability for any errors it contains, and reserves the right to alter specifications without notice. GORE and STA-PURE are trademarks of W. L. Gore & Associates. Please state the product code when ordering pumps and tubing.



wmfts.com/global  
10 July 2025