

NBR for Food Hose 50

NBR for Food hose



Features and benefits

- Suitable for a wide range of food products
- Perfect compression for long life
- Excellent suction performance - 9 m suction lift
- High pressure capability - up to 232 psi
- Repeatable volumetric accuracy to $\pm 1\%$
- Consistent capacity independent of varying suction and discharge conditions
- Exceptional performance when handling high viscosity product
- Max. fluid temperature: 176 °F, Min. fluid temperature: 14 °F



Technical specifications

	NBR for Food Hose 50
Max. operating pressure	232 psi (16 bar)
Max. suction capability	354 inWC (9 mWC)
Suction capability (80% Flow rate)	6 mWC (236 inWC)
Operating temperature	-4 °F to 113 °F (-20 °C to 45 °C)
Fluid temperature ranges	14 °F to 176 °F (-10 °C to 80 °C)
Bore size	1.97 in (50 mm)
Wall thickness	0.591 in (15 mm)
Length	71.7 in (1820 mm)
Weight	13.23 lbs (6 kg)

Your local Bredel sales office/distributor can advise the right hose for your application. For best pump performance use Bredel Genuine Hose Lubricant (NSF Non food Compound Program Listed, category H1)

Materials of construction


	NBR for Food Hose 50
Material	NBR
Inner layer	NBR
Outer layer	NR

Hose composition



1. Rough hose surface prior to machining.
2. Precision machined NR outer layer.
3. Two or four nylon cord reinforcement layers.
4. Inner layer available in NR, NR Endurance, EPDM, NBR, F-NBR or CSM.

Product codes

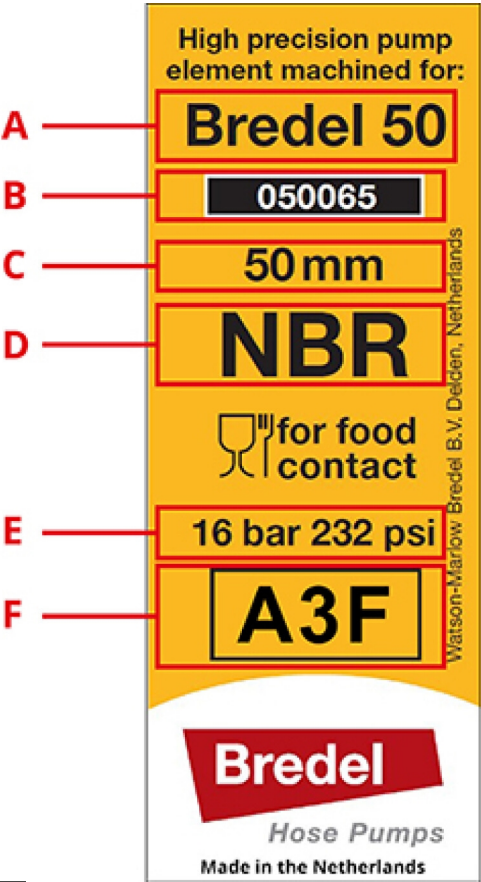

	Label codes
A	Pump type
B	Re-order number
C	Bore size
D	Material of the inner layer
E	Maximum permitted pressure
F	Factory code [material; year; month]

On one end of each hose the factory code [material; year; month] and the batch number are engraved.

Year: last digit (7 = 2017)

Month: A = Jan, E = May

Material: E = F-NBR, M = CSM, NM or NT = NR, P = NBR, S = EPDM

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Bredel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Bredel are registered trademarks.



wmfts.com/global
28 October 2025