

Cover lifting device

Cover lifting device

Bredel
Hose Pumps

Features and benefits

- The Cover Lifting Device (CLD) provides a safe working environment during maintenance
- Safe, quick and easy cover removal and assembly for Bredel 50-100 pumps
- Easy to mount on existing pumps
- As a lifting tool, the CLD arm can be used across multiple supports, on different sized pumps




Technical specifications

	Cover lifting device
Assembly weight	21 kg (46 lbs)
Max. lifting load	200 kg
Max. lifting load	440 lbs
Dimensions	26L x 5.5W x 41.7H in

Materials of construction

	Cover lifting device
Support frame	ST37-2 galvanised steel, Stainless steel 316
Arm	ST37-2 painted steel
Lifting equipment	Galvanised steel, Stainless steel AISI 316

Cover lifting device dimensions

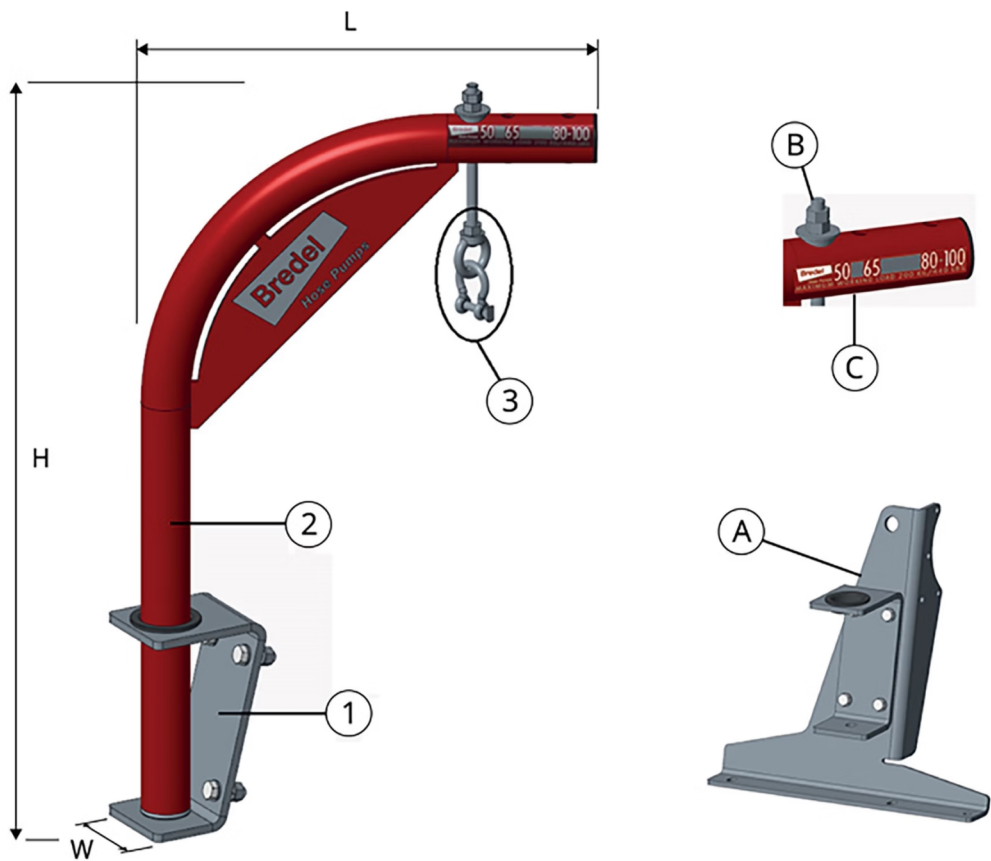

Key	Notes
L	660 mm (26 in)
W	140 mm (5.5 in)
H	1058 mm (41.7 in)
1	Support
2	Arm
3	Lifting equipment
A	The CLD is available as a complete unit. The support can also be ordered separately to use the beam on different sized pumps.
B	By moving the lifting point, the CLD can be used on the Breidel 50, 65, 80 and 100 pumps.
C	As indicated on the CLD, the maximum allowed lifting load is 200 kg (440 lbs). This is greater than the weight of the heaviest bredel pump cover and designed with a suitable safety factor defined by lifting guidelines and standards.

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Breidel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Breidel are registered trademarks.



wmfts.com/global
21 May 2026