

NBR (Buna N) 80

NBR (Buna N) hose

Bredel

Hose Pumps

Features and benefits

- Tight tolerances for low stress on bearings
- Perfect compression for long life
- Excellent suction capability up to 8 mWC (315 inWC)
- High pressure capability - up to 232 psi
- Repeatable volumetric accuracy to $\pm 1\%$
- Consistent capacity independent of varying suction and discharge conditions
- Exceptional performance when handling high viscosity product
- Max. fluid temperature: 176 °F, Min. fluid temperature: 14 °F



Technical specifications

	NBR (Buna N) 80
Max. operating pressure	232 psi (16 bar)
Max. suction capability	315 inWC (8 mWC)
Suction capability (80% Flow rate)	5 mWC (197 inWC)
Operating temperature	-4 °F to 113 °F (-20 °C to 45 °C)
Fluid temperature ranges	14 °F to 176 °F (-10 °C to 80 °C)
Bore size	3.15 in (80 mm)
Wall thickness	0.827 in (21 mm)
Length	109.4 in (2780 mm)
Weight	46.3 lbs (21 kg)

Please consult your Bredel representative for lower or higher temperature operation.

Allowable ambient temperature is based on pump capabilities and may be further limited by gearbox ambient capabilities.

Materials of construction


	NBR (Buna N) 80
Material	NBR
Inner layer	NBR
Outer layer	NR

Hose composition



1. Rough hose surface prior to machining.
2. Precision machined NR outer layer.
3. Two or four nylon cord reinforcement layers.
4. Inner layer available in NR, NR Endurance, EPDM, NBR, F-NBR or CSM.

Product codes

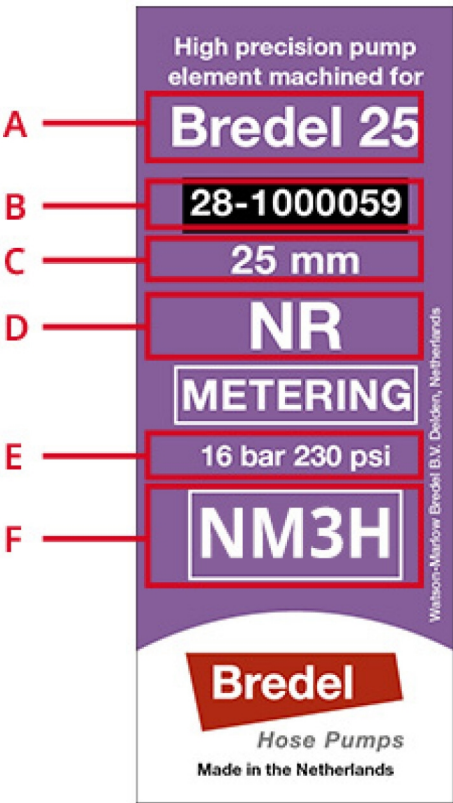

	Label codes
A	Pump type
B	Re-order number
C	Bore size
D	Material of the inner layer
E	Maximum permitted pressure
F	Factory code [material; year; month]

On one end of each hose the factory code [material; year; month] and the batch number are engraved.

Year: last digit (7 = 2017)

Month: A = Jan, E = May

Material: E = F-NBR, M = CSM, NM or NT = NR, P = NBR, S = EPDM

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Bredel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Bredel are registered trademarks.



wmfts.com/global
28 October 2025