

DuCoNite25

Bredel DuCoNite® pumps

Bredel

Hose Pumps

Features and benefits


- Dry running and self-priming
- Suction capability up to 9.5 mWC (374 inWC)
- Simple hose change decreases cost of ownership, downtime and need for parts inventory
- "Beyond the hose" protection against common water and waste water treatment chemicals
- Paint-free pump housing perfect for wash-down in the food industry
- No slippage, allowing true positive displacement for accurate, repeatable metering
- No ancillary equipment, check valves, sealing water flush systems or run-dry protection required
- Fully reversible to blow out suction and drain lines safely



DuCoNite25 performance

DuCoNite 25

Required
motor power kW (hp)

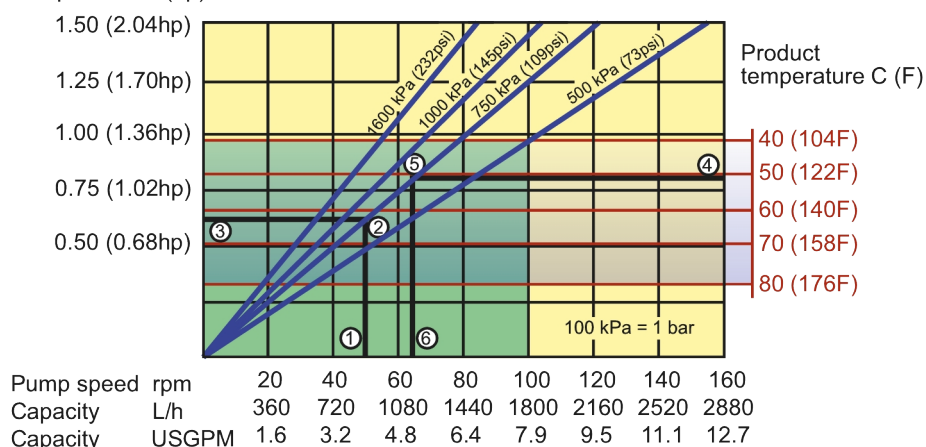

1. Flow required indicates pump speed
2. Calculated discharge pressure
3. Net motor power required
4. Product temperature
5. Calculated discharge pressure
6. Maximum recommended pump speed

Note: The area of continuous operation diminishes with increased product temperatures. For product temperatures >40C, the area of continuous operation reduces to the corresponding red temperature line.

- Continuous duty
- Intermittent duty

* Maximum 3 hours operation followed by minimum 1 hour stop

Technical specifications

	DuCoNite25
Max. flow rate continuous	1800 L/h (475 USGPH)
Max. flow rate intermittent	2740 L/h (723 USGPH)
Volume per revolution	0.3 l (0.079 USG)
Max. continuous operating speed	100 rpm
Max. intermittent operating speed	155 rpm
Max. operating pressure	16 bar (232 psi)
Suction pressure	0.05 bar abs
Suction pressure	0.73 psi abs
Max. inlet pressure	3.5 bar abs (51 psi abs)
Max. suction capability	9.5 mWC (374 inWC)
Operating temperature	-20 °C to 45 °C (-4 °F to 113 °F)
Fluid temperature	-20 °C to 80 °C (-4 °F to 176 °F)
Min. starting torque	115 N m (1018 in.lbs)
Weight	90 kg (198 lbs)
Hose lubricant required	2.5 l (0.66 USG)
Port configurations	Down, Left, Right, Up
Compatible hose materials	CSM, EPDM, F-NBR, NBR, NBR for food, NR, NR-Metering, NR-Transfer
Flange assembly type	ANSI, DIN


Please consult your Bredel representative for lower or higher temperature operation.

Allowable ambient temperature is based on pump capabilities and may be further limited by gearbox ambient capabilities.

Materials of construction

	DuCoNite25
Hose material	CSM, EPDM, F-NBR, Natural rubber (NR), NBR, NBR for food, NR-Metering, NR-Transfer
Housing	Cast iron with DuCoNite surface treatment
Rotor assembly	Cast iron with DuCoNite surface treatment
Cover assembly	Cast iron with DuCoNite surface treatment
Brackets and fasteners	Stainless steel 316
Support frame	Stainless steel 316
Hose clamps	Stainless steel 316
Seals	EPDM, Viton®

DuCoNite25 dimensions

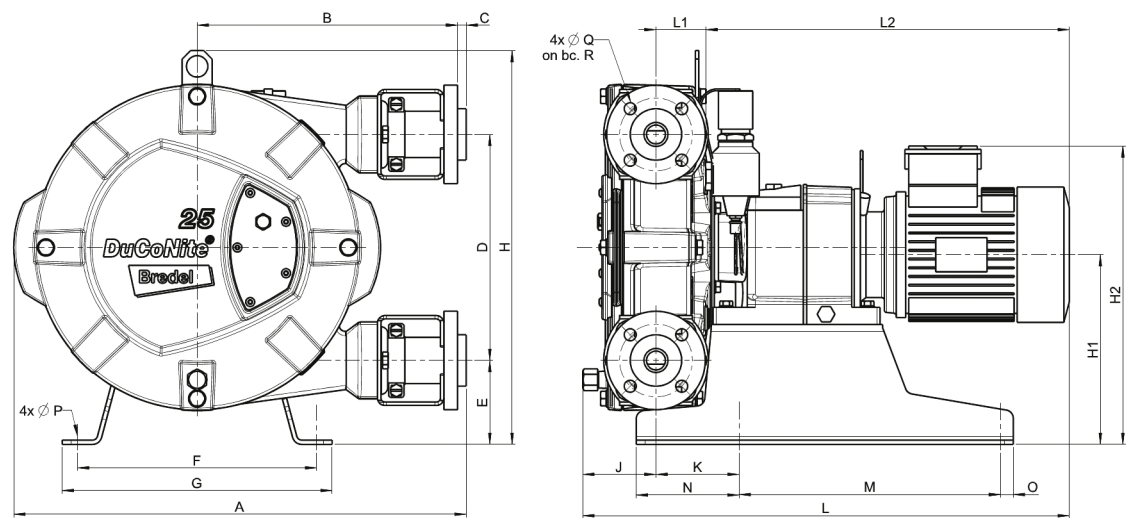

Type	A	B	C	D	E	F	G	H	H1	H2max	J	K	Lmax	L1	L2max	M	N	O	ØP	ØQ	R
DuCoNite 25 (mm)	521	304	2.5	264	98	279	315	460	222	359	66	97	592	58	468	305	120	15	12	14	85
DuCoNite 25 (inches)	20.5	12	0.09	10.4	3.9	11	12.4	18.1	8.7	14.1	2.6	3.8	23.3	2.3	18.4	12	4.7	0.6	0.47	0.6	3.3
Connector sizes							ANSI 150#						EN DIN					JIS			
DuCoNite 25							1"						25mm					25mm			

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Bredel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Bredel are registered trademarks.



wmfts.com/global
11 July 2025