

NBR for Food Hose 80

NBR for Food hose



Features and benefits

- Suitable for a wide range of food products
- Perfect compression for long life
- Excellent suction capability up to 8 mWC (315 inWC)
- High pressure capability 16 bar (232 psi)
- Repeatable volumetric accuracy to $\pm 1\%$
- Consistent capacity independent of varying suction and discharge conditions
- Exceptional performance when handling high viscosity product
- Max. fluid temperature: 80 °C (176 °F), Min. fluid temperature: -10 °C (14 °F)



Technical specifications

	NBR for Food Hose 80
Max. operating pressure	16 bar (232 psi)
Max. suction capability	8 mWC (315 inWC)
Suction capability (80% Flow rate)	5 mWC (197 inWC)
Operating temperature	-20 °C to 45 °C (-4 °F to 113 °F)
Fluid temperature	-10 °C to 80 °C (14 °F to 176 °F)
Bore size	80 mm (3.15 in)
Wall thickness	21 mm (0.827 in)
Length	2780 mm (109.4 in)
Weight	21 kg (46.3 lbs)

Your local Breidel sales office/distributor can advise the right hose for your application. For best pump performance use Breidel Genuine Hose Lubricant (NSF Non food Compound Program Listed, category H1)

Materials of construction


	NBR for Food Hose 80
Material	NBR
Inner layer	NBR
Outer layer	Natural rubber (NR)

Hose composition



1. Rough hose surface prior to machining.
2. Precision machined NR outer layer.
3. Two or four nylon cord reinforcement layers.
4. Inner layer available in NR, NR Endurance, EPDM, NBR, F-NBR or CSM.

Product codes

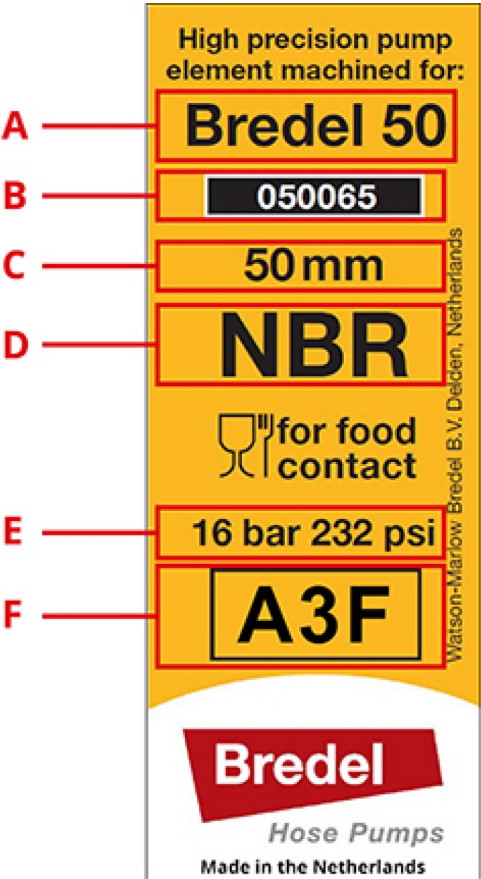

Label codes	
A	Pump type
B	Re-order number
C	Bore size
D	Material of the inner layer
E	Maximum permitted pressure
F	Factory code [material; year; month]

On one end of each hose the factory code [material; year; month] and the batch number are engraved.

Year: last digit (7 = 2017)

Month: A = Jan, E = May

Material: E = F-NBR, M = CSM, NM or NT = NR, P = NBR, S = EPDM

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Breedel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Breedel are registered trademarks.



wmfts.com/global
28 October 2025