

APEX EPDM Hose 20

APEX EPDM hose



Features and benefits

- Tight tolerances for low stress on bearings
- Perfect compression for long life
- Excellent suction capability up to 9 mWC (354 inWC)
- High pressure capability 8 bar (116 psi)
- Repeatable volumetric accuracy to $\pm 1\%$
- Consistent capacity independent of varying suction and discharge conditions
- Exceptional performance when handling high viscosity product
- Max. fluid temperature: 80 °C (176 °F), Min. fluid temperature: -10 °C (14 °F)



Technical specifications

	APEX EPDM Hose 20
Max. operating pressure	8 bar (116 psi)
Max. suction capability	9 mWC (354 inWC)
Suction capability (80% Flow rate)	8.5 mWC (335 inWC)
Operating temperature	-20 °C to 45 °C (-4 °F to 113 °F)
Fluid temperature	-10 °C to 80 °C (14 °F to 176 °F)
Bore size	20 mm (0.79 in)
Wall thickness	8.5 mm (0.335 in)
Length	690 mm (27.2 in)
Weight	0.61 kg (1.32 lbs)

Your local Bredel sales office/distributor can advise the right hose for your application. For best pump performance use Bredel Genuine Hose Lubricant (NSF Non food Compound Program Listed, category H1)

Materials of construction


	APEX EPDM Hose 20
Material	EPDM
Inner layer	EPDM
Outer layer	Natural rubber (NR)

Hose composition



1. Rough hose surface prior to machining.
2. Precision machined NR outer layer.
3. Two or four nylon cord reinforcement layers.
4. Inner layer available in NR, EPDM, NBR, F-NBR or CSM.

Product codes

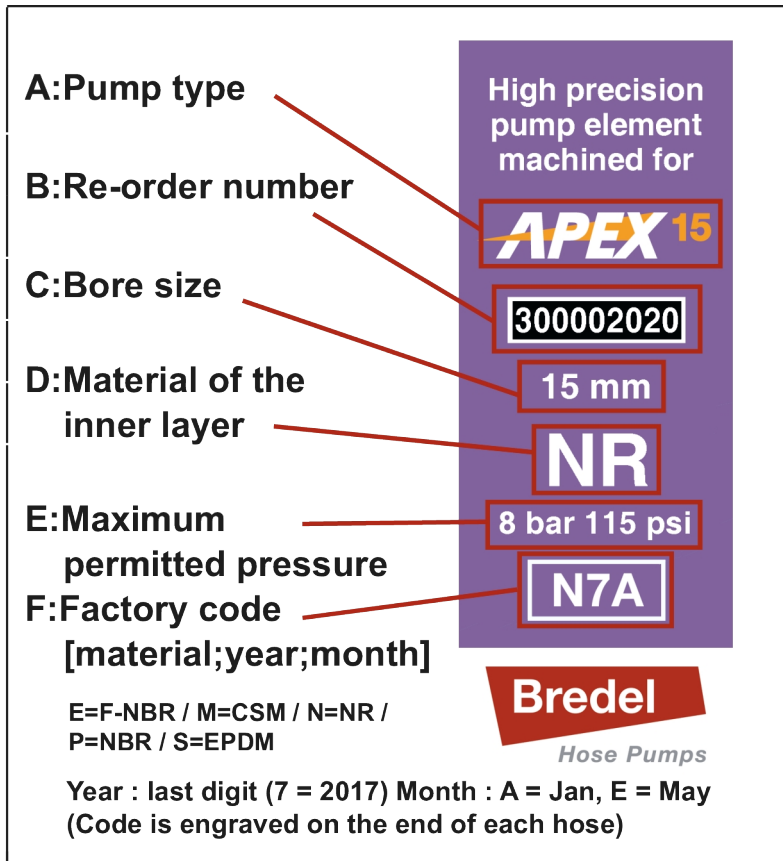

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Breidel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Breidel are registered trademarks.



wmfts.com/global
28 October 2025